



DQT ODTVIEW EQUIPMENT SETUP/SYNC

Subject: AM Asset Setup


Created: 12/18/2020

Updated: 6/6/2022

Version: 1.1

Asset Setup

1. Log into ODTview
2. Select show equipment icon that is the upper right list of icons after the location drop down

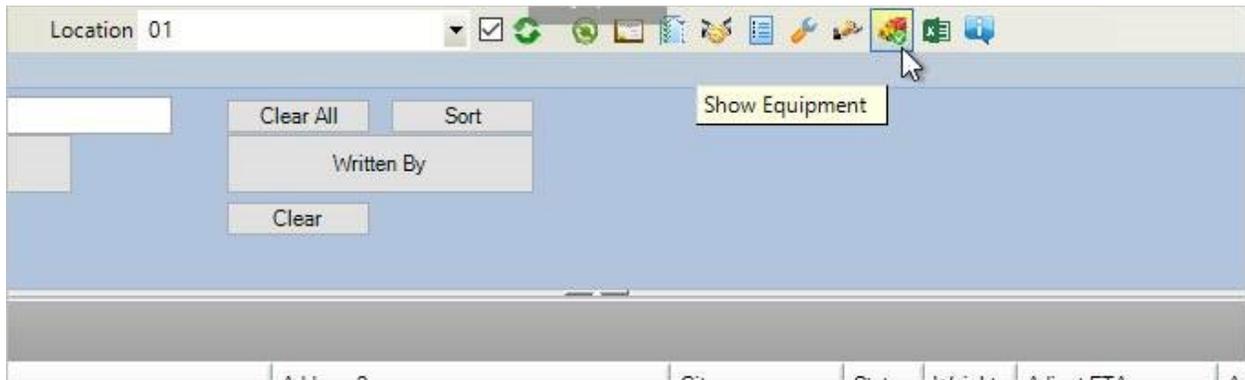

Click on the Add New option and choose to Add New AM Equipment and then fill in all the fields highlighted on the AM side.

If you do not subscribe to DQTech's Asset Management services, then choose the Add New to ODT option and ignore any references to AM.

3.

Equipment [Save](#) [Cancel](#) [Add New](#)

Detail

ODT AM

Equip Filter

Equipment

Vehicle Information

Equipment Number	<input type="text"/>	<input type="button" value="→"/> <input type="button" value="←"/>	BOI-B2
Equipment Description	<input type="text"/>	<input type="button" value="→"/> <input type="button" value="←"/>	BOI-B2
Asset Number	<input type="text"/>	<input type="button" value="→"/> <input type="button" value="←"/>	BOI-B2
Make	<input type="text"/>	<input type="button" value="→"/> <input type="button" value="←"/>	FORD
Model	<input type="text"/>	<input type="button" value="→"/> <input type="button" value="←"/>	F350
Year	<input type="text"/>	<input type="button" value="→"/> <input type="button" value="←"/>	2021
VIN#	<input type="text"/>	<input type="button" value="→"/> <input type="button" value="←"/>	123156161ADSDAD16AD1
Location	<input type="text"/>	<input type="button" value="→"/> <input type="button" value="←"/>	DQT Bse
Device Id	<input type="text"/>	<input type="button" value="→"/> <input type="button" value="←"/>	
Assigned Driver	<input type="text"/>	<input type="button" value="→"/> <input type="button" value="←"/>	
Active	<input type="text"/>	<input type="button" value="→"/> <input type="button" value="←"/>	Yes

License/Registration

Purchase Type	<input type="text"/>	<input type="button" value="→"/> <input type="button" value="←"/>	
Purchase Date	<input type="text"/>	<input type="button" value="→"/> <input type="button" value="←"/>	
Purchase Amount	<input type="text"/>	<input type="button" value="→"/> <input type="button" value="←"/>	
Cost Per	<input type="text"/>	<input type="button" value="→"/> <input type="button" value="←"/>	2.50
Tag Number	<input type="text"/>	<input type="button" value="→"/> <input type="button" value="←"/>	
License Authority	undefined	<input type="button" value="→"/> <input type="button" value="←"/>	Idaho
Tag Expiration	<input type="text"/>	<input type="button" value="→"/> <input type="button" value="←"/>	
Delivery Resource	<input type="text"/>	<input type="button" value="→"/> <input type="button" value="←"/>	Yes
Tracking Type	<input type="text"/>	<input type="button" value="→"/> <input type="button" value="←"/>	Per Mile
Weight	<input type="text"/>	<input type="button" value="→"/> <input type="button" value="←"/>	25,000
Volume	<input type="text"/>	<input type="button" value="→"/> <input type="button" value="←"/>	12,000
Capacity	<input type="text"/>	<input type="button" value="→"/> <input type="button" value="←"/>	

Mechanical			
Odometer	<input type="text"/>	<input type="button" value="→"/> <input type="button" value="←"/>	<input type="text"/>
Odometer Time			
Engine Hours	<input type="text"/>	<input type="button" value="→"/> <input type="button" value="←"/>	<input type="text"/>
Engine Hours Time			
Equipment Type	<input type="text"/>	<input type="button" value="→"/> <input type="button" value="←"/>	<input type="text" value="Box Truck"/>
CMV Power Unit Number	<input type="text"/>	<input type="button" value="→"/> <input type="button" value="←"/>	<input type="text" value="B01-B2"/>
Engine Bus Interface Type	<input type="text"/>	<input type="button" value="→"/> <input type="button" value="←"/>	<input type="text" value="9-PIN-GREEN-JBUS"/>
DQ Tracker Wiring	<input type="text"/>	<input type="button" value="→"/> <input type="button" value="←"/>	<input type="text" value="Direct Jbus 9-PIN Green"/>
OTR	<input type="text"/>	<input type="button" value="→"/> <input type="button" value="←"/>	<input type="text" value="Yes"/>
ELD	<input type="text"/>	<input type="button" value="→"/> <input type="button" value="←"/>	<input type="text" value="No"/>
ELD Exempt	<input type="text"/>	<input type="button" value="→"/> <input type="button" value="←"/>	<input type="text"/>
Apportioned	<input type="text"/>	<input type="button" value="→"/> <input type="button" value="←"/>	<input type="text"/>
Special Equip	<input type="text"/>	<input type="button" value="→"/> <input type="button" value="←"/>	<input type="text"/>
Route Vehicle	<input type="text"/>	<input type="button" value="→"/> <input type="button" value="←"/>	<input type="text"/>

4. Then hit the Save option in the upper left of the details.
5. You should then be able to select the new truck from the Equipment drop down list from the AM side of that section. And then can hit the blue, left pointing arrow. That will populate all of the already set AM information for the truck to the ODT side and then Save.