


# LS 2208 Setup Barcodes



1. Set All Defaults



Low Volume

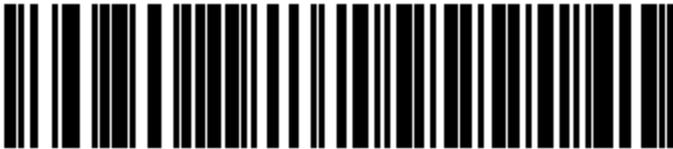

2. IBM Hand-Held USB



3. Scan Options



Medium Volume



4. Data Suffix



5. Enter



\*High Volume